

Home » Categories » Computers and Electronics » Hardware » Internal Components

Edit

How to Convert a Computer ATX Power Supply to a Lab Power Supply

Edited by Abizarl and 34 others

Article

Edit

Discuss

History


Tweet

Like

300

Computer power supplies cost around US\$30, but lab power supplies can run you \$100 or more! By converting the cheap (free) ATX power supplies that can be found in any discarded computer, you can get a phenomenal lab power supply with huge current outputs, short circuit protection, and reasonably tight voltage regulation on the 5V line.

On most PSUs, the other lines are unregulated.

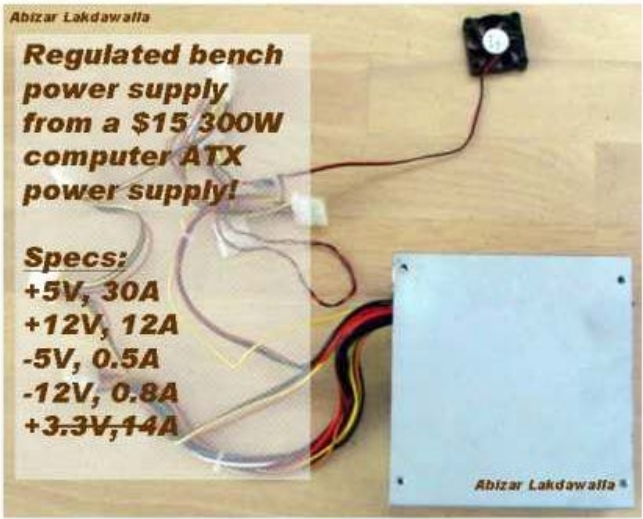

Steps

Edit

- 1 Look online or at your local computer store for an ATX computer power supply. Or, dismantle an old computer and remove the power supply from the case.
- 2 Unplug the power cable from the power supply and turn off the switch on the back (if there is one). Also, be sure you are grounded so that you don't introduce any static electricity and fry everything.
- 3 Remove the screws that attach the power supply to the computer case and remove the power supply.
- 4 Cut off the connectors (leave a few inches of wire on the connectors so that you can use them later on for other projects).
- 5 Discharge the power supply by letting it sit unconnected for a few days. Some people suggest attaching a 10 ohm resistor between a black and red wire (from the power cables on the output side), however this is only guaranteed to drain the low voltage capacitors on the output - which aren't dangerous to begin with! It could leave the high-voltage capacitors charged, resulting in a potentially dangerous - or even lethal - situation.

6

Write An Article

Random Article



Follow wikiHow on facebook

Like

1,321,150 people like this.

Related Articles



Build a Powerful Quiet Computer



Buy a Power Supply



Make Your Own Lineman's Telephone




Build a Shed


Related Videos



Convert a high power supply with an adapter supply



Upgrade your power supply on a PC



Open a power supply without destroying a transformer



Install the Voltz battery-powered pedal supply

Featured Articles



Fold Bath Towels for Quick Hanging at Home



Manage Facebook Privacy Options



Find New Uses for Old Tennis Balls




Pack for a Festival

Recent Changes

161

An Anonymous visitor made an edit to Enjoy a Private Weekend


An Anonymous visitor posted a comment on the discussion page for Be a Hipster 22 seconds ago

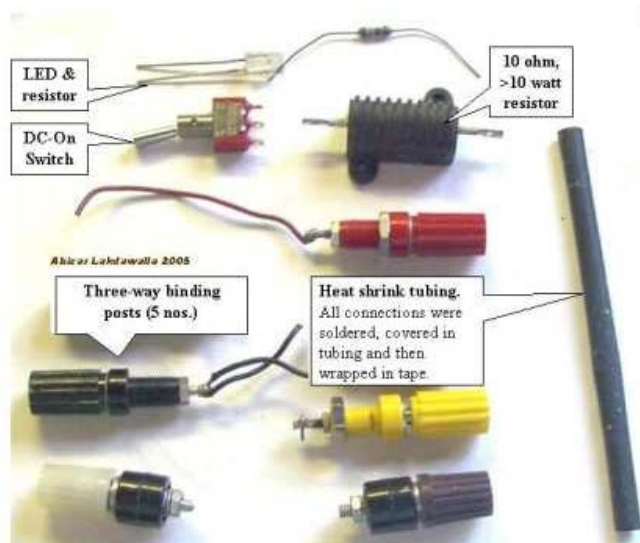

Gather the parts you need: binding posts (terminals), a LED with a current-limiting resistor, a switch (optional), a power resistor (10 ohm, 10W or greater wattage, see Tips), and heat shrink tubing.

7 Open up the power supply unit by removing the screws connecting the top and the bottom of the PSU case.

8 Bundle wires of the same colors together. If you have wires not listed here (brown, etc), see the Tips.

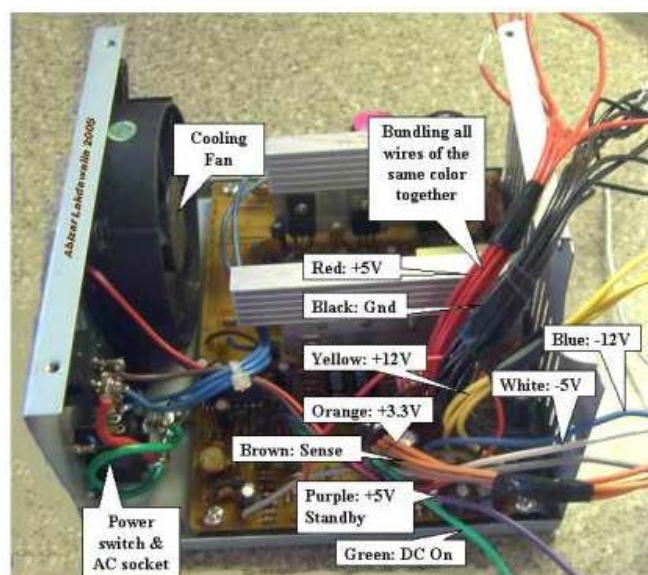

The color code for the wires is: Red = +5V, Black = Ground (0V), White = -5V, Yellow = +12V, Blue = -12V, Orange = +3.3V, Purple = +5V Standby (not used), Gray = power is on (output), and Green = Turn DC on (input).

9

Want to join in?



Meet a Community Member




Meet **Wdt3223**, a school teacher in training who's been with us for a year and a half. He has made more than 3,500 contributions, **patrolled** over 16,000 changes and written 19 articles.

Join The Community

Follow Us On...



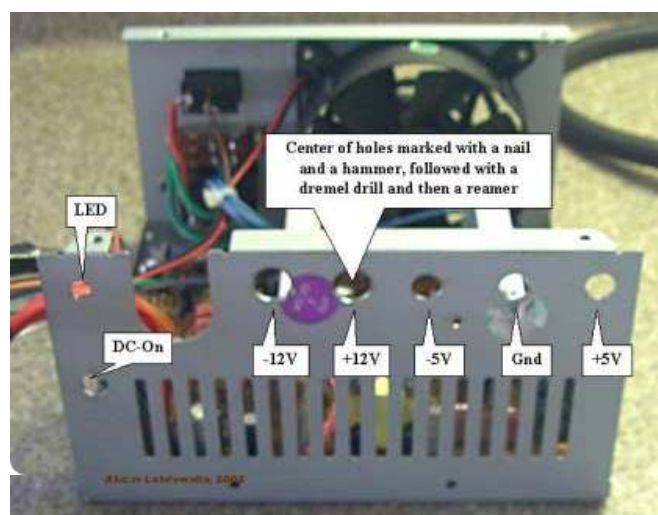

Drill holes in a free area of the power supply case by marking the center of the holes with a nail and a tap from the hammer. Use a Dremel to drill the starting holes followed by a hand reamer to enlarge the holes until they are the right size by test fitting the binding posts. Also, drill holes for the power ON LED and a Power switch (optional).

10




Screw the binding posts into their corresponding holes and attach the nut on the back.

11

Connect all the pieces together.


- Connect one of the red wires to the power resistor, all the remaining red wires to the red binding posts;
- Connect one of the black wires to the other end of the power resistor, one black wire to a resistor (330 ohm) attached to the cathode (shorter lead) of the LED, one black wire to the DC-On switch, all the remaining black wires to the black binding post;
- Connect the white to the -5V binding post, yellow to the +12V binding post, the blue to the -12V binding post, the gray to the anode (longer lead) of the LED;

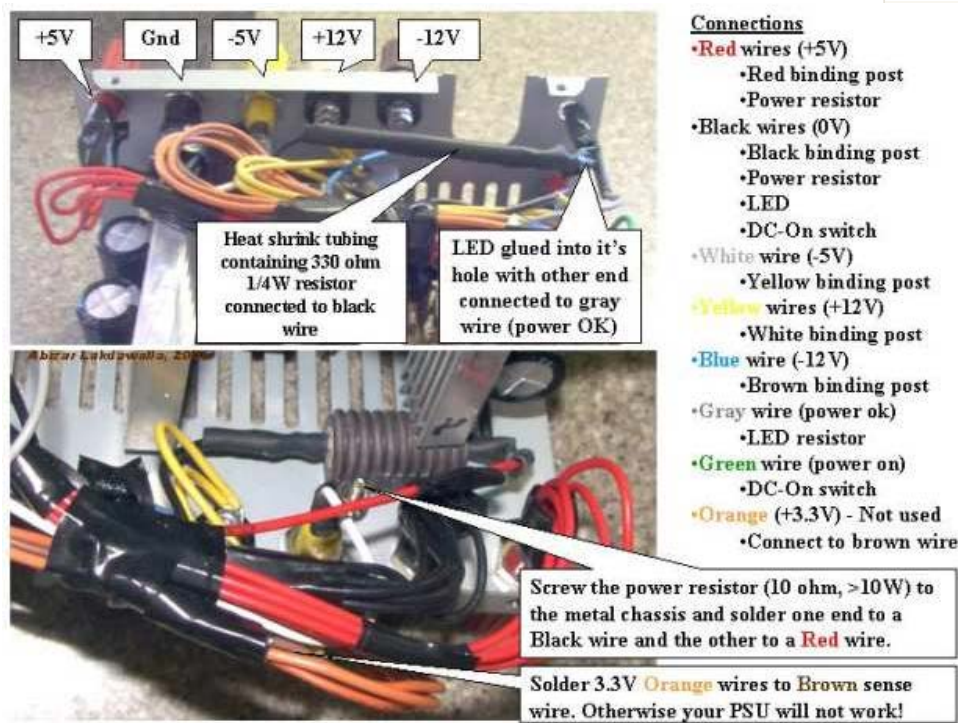

Note that some power supplies may have either a gray or brown wire to represent "power good"/"power ok". (Most pSU's have a smaller orange wire that is used for sensing-- 3.3V- and this wire is usually paired at the connector to another orange wire. Make sure this wire is connected to the other orange wires, otherwise your lab power supply won't stay on.) This wire should be connected to either an orange wire (+3.3V) or a red wire (+5V) for the power supply to function. When in doubt, try the lower voltage first (+3.3V). If a power supply is non ATX or AT compliant, it may have its own color scheme. If yours looks different than the pictures shown here, make sure you reference the position of the wires attached to the AT/ATX connector rather than the colors.

- Connect the green wire to the other terminal on the switch.
- Make sure that the soldered ends are insulated in heatshrink tubing.
- Organize the wires with a electrical tape or zip-ties.

12

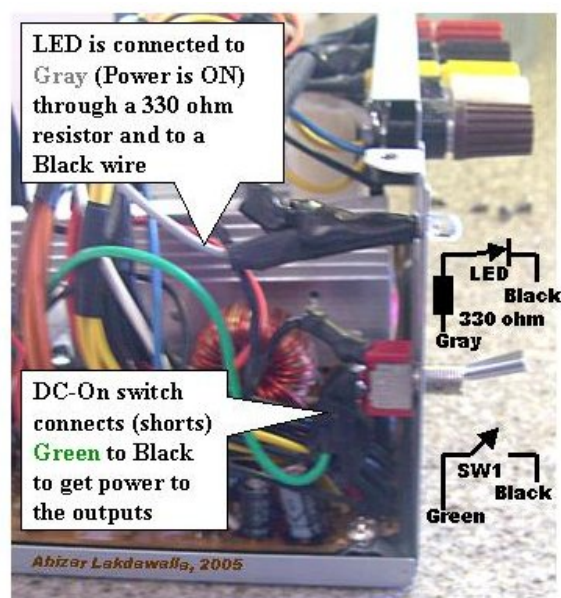

Check for loose connections by gently tugging on them. Inspect for bare wire, and cover it to prevent a short circuit. Put a drop of super-glue to stick the LED to its hole. Put the cover back on.

13



Plug the power cable into the back of the power supply and into an AC socket. Flip the main cutoff switch on the PSU if there is one. Check to see if the LED light comes on. If it has not, then power up by flipping the switch you placed on the front. Plug in a 12V bulb into the different sockets to see if the PSU works, also check with a digital voltmeter. It should look good and work like a charm!

Video

Edit

Tips

Edit

- Options: You don't need an additional switch, just connect the green and a black wire together. The PSU will be controlled by the rear switch, if there is one. You also don't need an LED, just ignore the gray wire. Cut it short and insulate it from the rest.
- Some newer power supplies will have "voltage sense" wires that need to be connected to the actual voltage wires for proper operation. In the main power bundle (the one with 20 wires), you should have four red wires and three orange wires. If you only have two orange wires, you should also have a brown wire which must be connected with the orange. If you only have three red wires, another wire (sometimes pink) must be connected to them.
- Also some power supplies need the grey and green to be connected together in order to run.

- If the power supply does not work, that is, no LED light, check to see if the fan has come on. If the fan in the power supply is on, then the LED may have been wired wrong (the positive and negative leads of the LED may have been switched). Open the power supply case and flip the purple or gray wires on the LED around (make sure that you do not bypass the LED resistor).
- If you are not sure of the power supply, test it in the computer before you harvest. Does the computer power on? Does the PSU fan come on? You can place your voltmeter leads into an extra plug (for disk drives). It should read close to 5V (between red and black wires). A supply that you have pulled may look dead because it does not have a load on its outputs and the enable output may not be grounded (green wire).
- ATX power supplies are switched-mode power supplies (info at http://en.wikipedia.org/wiki/Switched_mode_power_supply); they must always have some load to operate properly. The power resistor is there to "waste" energy, which will give off heat; therefore it should be mounted on the metal wall for proper cooling (you can also pick up a heatsink to mount on your resistor, just make sure the heatsink doesn't short circuit anything). If you will always have something connected to the supply when it is on, you may leave out the power resistor. You can also consider using a lighted 12v switch, which will act as the load necessary to turn on the power supply.
- Feel free to add some pizzazz to the dull grey box.
- You can also convert this to a variable voltage power supply - but that is another article (hint: Uses a 317 IC with power transistor).
- The voltages that can be output by this unit are 24v (+12, -12), 17v (+5, -12), 12v (+12, GND), 10v (+5, -5), 7v (+12, +5), 5v (+5, GND) which should be sufficient for most electrical testing. Many ATX power supplies with a 24-pin connector for motherboards will not supply the -5V lead. Look for ATX power supplies with a 20-pin connector, a 20+4-pin connector, or an AT power supply if you need -5V.
- If you DO have a sense wire for the 3.3v. , connecting the the 3.3 v. part of the supply, using the 3.3v. voltage as a buck voltage against, say the 12v. to get 8.7v. will not work. You will see 8.7 v. with a volt meter but when you load that 8.7v. circuit the power supply may go into protective mode and shut the whole supply down.
- You can add a 3.3 volt output (such as to power 3V battery-powered devices) to the supply by hooking the orange wires to a post (making sure the brown wire remains connected to an orange wire) but beware that they share the same power output as the 5 volt, and thus you must not exceed the total power output of these two outputs.
- To get more room you can mount the fan on the outside of the PSU case
- If you don't feel like soldering nine wires together to a binding post (as is the case with the ground wires) you can snip them at the PCB. 1-3 wires should be fine. This includes cutting any wires that you don't ever plan on using.
- The +5VSB line is +5V standby (so the motherboard's power buttons, Wake on LAN, etc. work). This typically provides 500-1000 mA of current, even when the main DC outputs are "off". It might be useful to drive an LED from this as an indication that the mains are on.
- The -5v rail was removed from the ATX specification and does not exist on all ATX power supplies.
- The fan on a PS can be quite loud, its designed to cool a relatively heavily loaded PS as well as the computer. There is the possibility of just clipping the fan but is not a good idea. A work around is to cut the red wire going to the fan (12V) and connect it to a red wire going out of the PS (5V). Your fan will now be spinning significantly slower and thus quieter, but still provide some cooling. If you plan to draw a lot of current from the PS this might be a bad idea, be your own judge and see how hot the thing gets. You can also remove the stock fan and replace it with a quieter model (there will be soldering to do though.)
- Some power supplies will have both a sense+ and sense- (on the circuit board S+ and S-) In this case the S+ must be connected to 3.3V and the S- must be connected to ground. While some power supplies may differ, I found S+ was orange (connect to orange 3.3V) and S- was brown (connect to black ground)

Warnings

Edit

- Line voltage can **kill** (anything above 30 milliamps/volts can kill you in a matter of time if it somehow penetrates your skin), and at the very least give you a painful shock. Make sure that you have removed the power cord before doing the conversion and have discharged the capacitors as described in the steps above. If in doubt, [use a multimeter](#).

- If you suspect the power supply is damaged, **do not** use it! If it is damaged, the protection circuitry may not work. Normally, a protection circuit will slowly discharge the high voltage capacitors - but if the supply was connected to 240V while set at 120V (for example), the protection circuits have probably been destroyed. If so, the power supply might not shut down when it is overloaded or when it begins to fail.
- Do not touch any lines leading to capacitors. Capacitors are cylinders, wrapped in a thin plastic sheath, with exposed metal at the top with a + or K usually. Solid-state capacitors are shorter, a little wider in diameter, and do not have a plastic sheath. They retain a charge much like batteries do, but unlike batteries, they can discharge extremely fast. Even if you have discharged the unit, you should avoid touching any points on the board except where necessary. Use a probe to connect anything you might touch to ground before beginning any work.
- Do not remove the circuit board unless you must. The traces and solder on the underside could still have high voltage on them if you didn't let the PSU sit long enough. If you must remove it, use a meter to check for voltage on the pins of the largest capacitors. When you replace the board, make sure that the plastic sheet goes back under the board.
- When drilling the metal case, make sure no metal filings get inside the PSU. These could cause shorts, which in turn could cause a fire, extreme heat or dangerous electrical spikes on one of your outputs which will break your new lab power supply which you worked so hard on.
- A computer power supply is fine for testing purposes, or for running simple electronics (eg battery chargers, soldering irons) but will never produce power like a good lab power supply, so if you intend on using your power supply for more than just testing, buy yourself a good lab supply. There is a reason they cost so much.
- It is strongly recommended that you discharge the capacitors. Plug in the power supply, turn on the power (short the Power (green) wire to ground, then unplug the power supply until the fan stops spinning.
- This will almost certainly void any warranty.
- The resulting power supply will provide high output power. It might happen you create an electric arc at the low voltage outputs or fry the circuit you are working on, if you make any mistake. Lab PSUs have adjustable current limitation for a reason.

Things You'll Need

Edit

- An ATX power supply of any rating above 150 Watt (can be found from an obsolete computer, online, or at your local computer store)
- Wire cutters
- Needle nose pliers
- Drill
- Reamer
- Soldering Iron & Solder
- Electrical Tape
- Heat Shrink Tubing & Heat Gun
- Binding posts
- LED
- Current limiting resistor for the LED (330 ohms)
- Power resistor to load the power supply
- Low Wattage Switch
- Computer Power Cable

Related wikiHows

Edit

- [How to Build a Powerful Quiet Computer](#)
- [How to Buy a Power Supply](#)
- [How to Make Your Own Lineman's Telephone](#)
- [How to Build a Shed](#)
- [How to Make a Simple and Effective Garage Workbench](#)
- [How to Add Variable Voltage to Your ATX Based Bench Power Supply](#)
- [How to Use an Old ATX Power Supply As a Lab Power Supply Without Modification](#)

- [How to Create a 12 Volt DC Test Bench for Bullet Cameras Using an Old ATX Computer Power Supply](#)

Sources and Citations

Edit

- <http://web2.murraystate.edu/andy.batts/ps/powersupply.htm> 

Articles for You to Write

Here is a list of suggested articles that have not yet been written. You can help by researching and writing one of these articles. To get started writing one of these articles, click on the red link of a title below.

- [How to Gather Supplies for Making Tie dye T shirts](#)
- [How to Build a Lighted Sign](#)
- [How to Make Solder Look Old](#)
- [How to Build Your Own Work Table](#)
- [How to Make a Charger Box](#)

Article Info

Last edited:
July 10, 2011 by Maniac

★ Featured Article

Categories:
[Featured Articles](#) | [Internal Components](#)

Recent edits by: [Victoria Ann](#), [Harri](#), [Noscco427](#) (see all)

Article Tools

Share this Article:     

 Tweet

 Like 300

 Discuss  Print  Email  Edit  Send fan mail to authors

+ Embed this: Republish this entire article on your blog or website.



Thanks to all authors for creating a page that has been read 1,227,091 times.

Was this article accurate?

Yes

No

Explore Categories

Site map	Sports and Fitness	Travel	wikiHow	Work World
	Youth			
<div><div>All text shared under a Creative Commons License.</div><div>Powered by Mediawiki.</div></div>				